

How to insert a liner in the Citadel

Below are instructions for proper insertion of a CDF form-fit liner into a Citadel bin.



Remove liner from box and place on table.


Note: Can also use Citadel tote lid



Unfold liner.



Open liner, keep dispense fitment towards you.

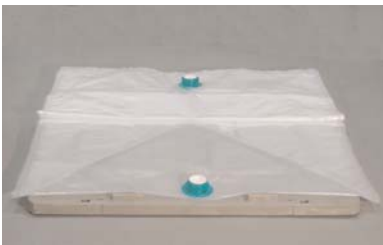

Remove bubble wrap from fill and dispense.



Place liner in container with dispense fitment end in first.



Lock dispense fitment into slide gate.



Attach fill fitment to fill bridge.



Tote is ready to fill.

INCREASING YOUR PRODUCTIVITY
DACO
MATERIAL HANDLING & PACKAGING SOLUTIONS
www.DACOCorp.com
800-345-3226



CDF Corporation · 77 Industrial Park Road · Plymouth, MA · 02360
800.443.1920 · www.cdf1.com