


KitBin Assembly Instructions

Easy assembly...by a single worker...in less than a minute

1

Insert sidewall panels into pallet base. Sidewall panels interlock into base to ensure structural integrity.

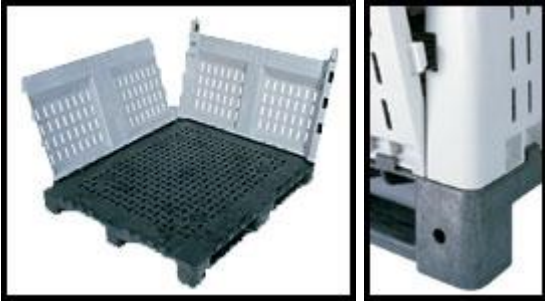

2

Align sidewalls so that interlocking mechanisms can be engaged. Push extended locking post down to secure interlock mechanism.



3

Repeat steps 1 and 2 for other sidewalls. To disassemble, press release latch and pull up on locking post.



DACO

(877) 247-3834 - dacocorp.com